

## Telescoping Wand

After installing the wand onto the trigger gun by hand, you may further secure the connection with a 1/8 turn of a wrench. Tighten the extension nut by hand only in a clockwise direction. To change the direction of spray tip, rotate the wand extension piece in a clockwise direction as to not loosen the extension nut.

